


 

POSITION LOCKER

 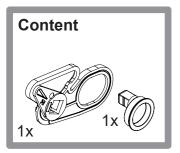


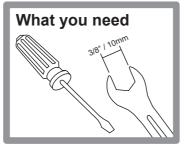

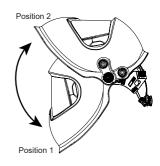



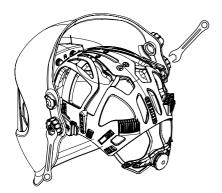








 


position locker.

Disassemble the excenter

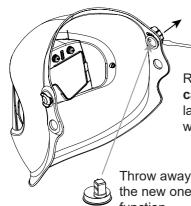

Remove the excenter carefully, you'll need it later again. And be careful with the painted surface.



Throw away this part and use the new one to ensure the function.



