


# Face seal User Instructions








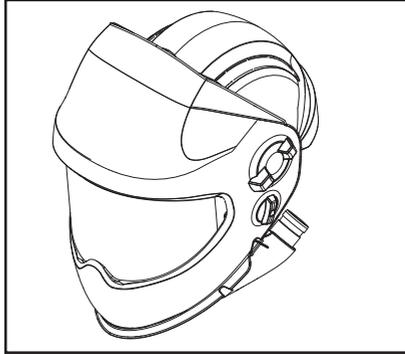


- DE Bedienungsanleitung
- GB User Instructions
- FR Notice d'utilisation
- IT Istruzioni per l'uso
- ES Instrucciones para el usuario
- PT Manual de instruções
- NL Gebruiksaanwijzing
- CZ Návod k použití
- DK Brugervejledning
- SE Bruksanvisning
- FI Käyttöohje
- RU РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ




**optrel ag**  
industriestrasse 2  
ch - 9630 wattwil  
phone: +41 (0)71 987 42 00  
fax: +41 (0)71 987 42 99  
info@optrel.com  
www.optrel.com


# Face seal removal

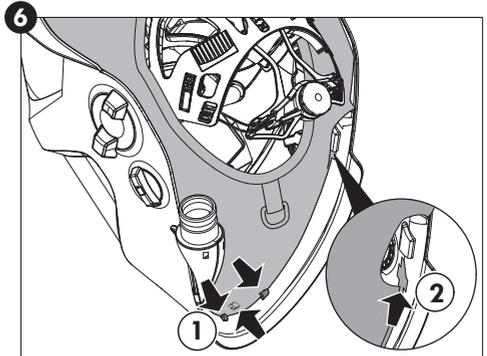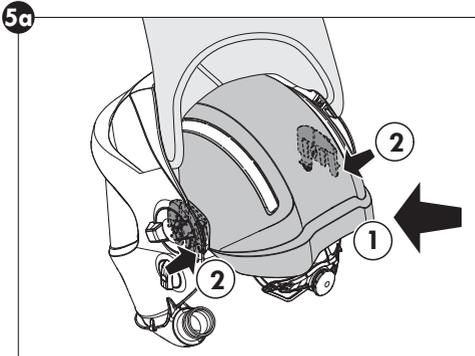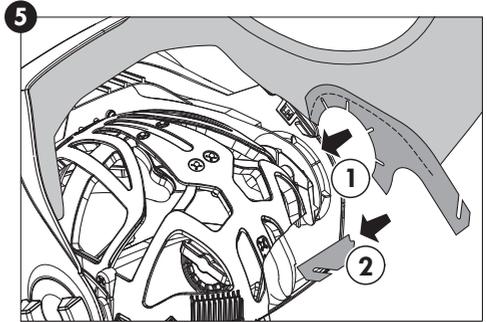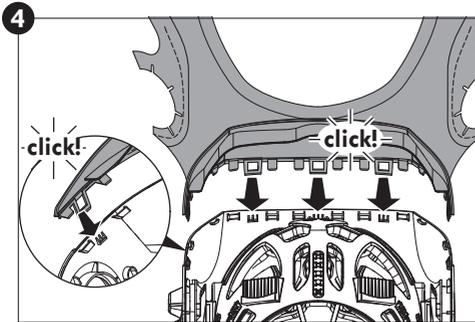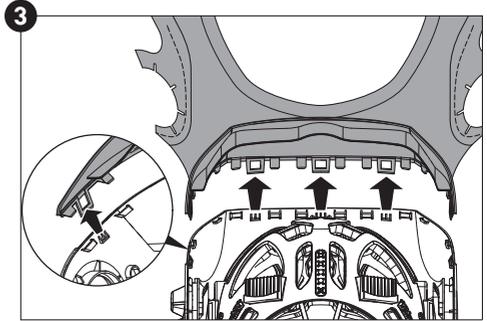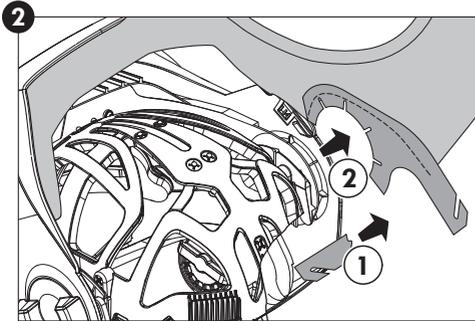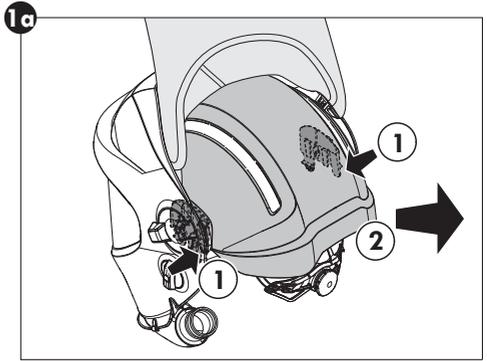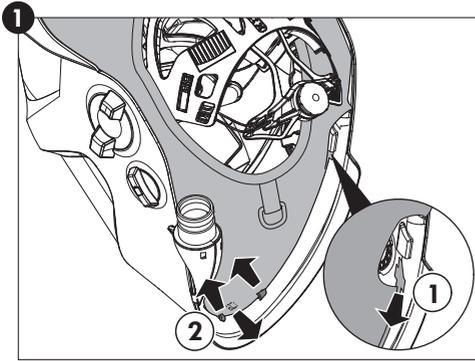


## Air hose assembly

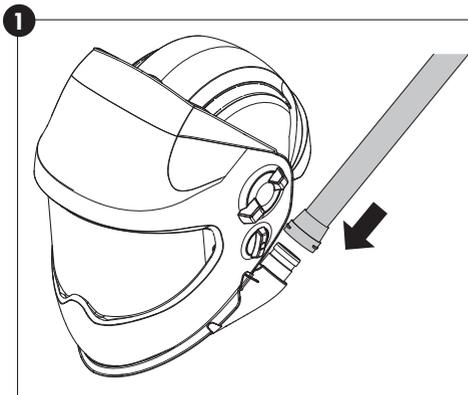



## Air hose removal

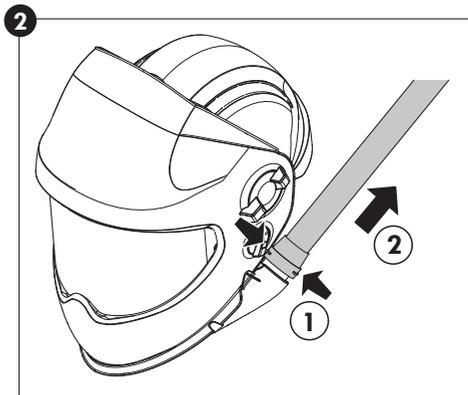

## Air hose holder

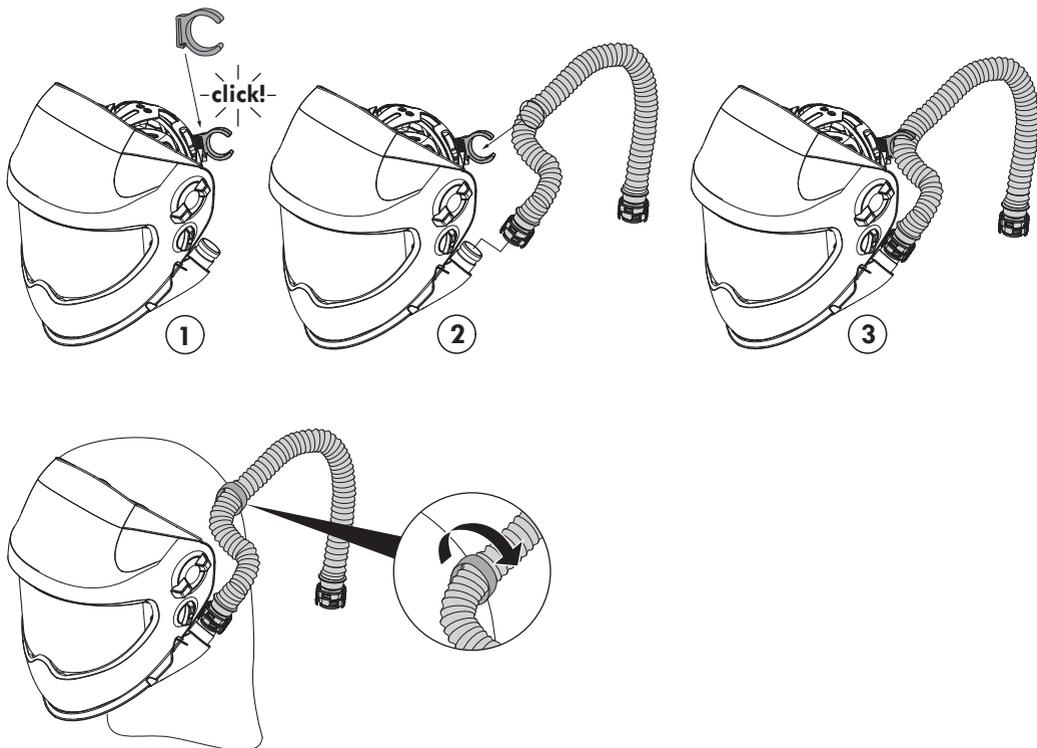

## Positioning of the head and face seal

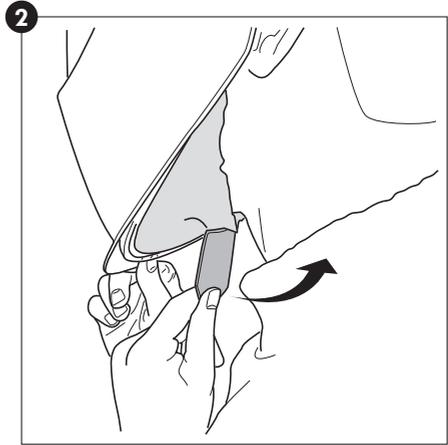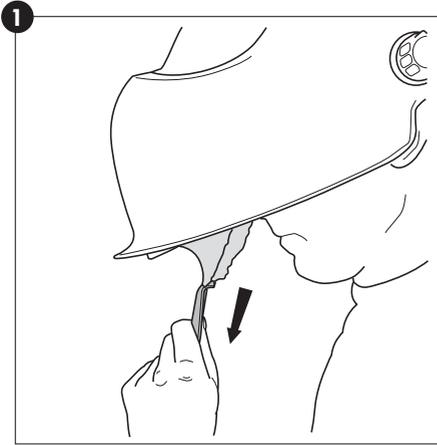

## Air distribution control

